

Installation manual aqualis for pump adapters

Disassembly and reassembly of the reservoir

To remove the top, turn the top counter-clockwise. After removing the top, the glass tube can easily be removed. Take care not to lose the gaskets. For reassembly, place the gaskets into the groves and screw the top onto the reservoir. Do not use any tools and use only moderate force. Make sure that the gaskets are properly aligned with their groves in the top and base part of the reservoir!

Installation of LEDs

Replace either one or both of the sealing screws installed into the base plate of the reservoir with acrylic sealing screws (part number 34919, not included in delivery). A cable duct leads to the side of the reservoir.

Installation to a pump adapter

Use light force to slide the connection ports of the reservoir base plate into the corresponding receptacles of the pump adapter. Base part of the reservoir and pump adapter should now be flush with each other. Do not use excessive force and check for correct alignment if necessary! Use four countersunk screws M4 x 12 mm supplied with the reservoir to fasten the reservoir to the pump adapter. Use light force only in order not to damage the threads in the plastic base part!